



METTLER TOLEDO



CÔNG TY TNHH KỸ THUẬT VÀ THƯƠNG MẠI HOÀNG THANH
HOANG THANH TECHNICAL & TRADING COMPANY LIMITED

Địa chỉ: Số 3 ngách 138/58/29 Tân Triều – Thanh Trì – Hà Nội

Điện Thoại : 0987 059 224 Fax: (04) 3552 8854

Website : hota.vn - bancandientu.vn Email: hoang.hota@gmail.com

IND320

Industrial Weighing Terminal

TECHNICAL MANUAL



WARNING

- 1、 Only qualified personnel should perform installation, programming, and service.
- 2、 For continued protection against shock hazard connect to properly grounded outlet only

©Mettler-Toledo, Inc.

No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the express written permission of Mettler-Toledo, Inc.

U.S. Government Restricted Rights: This documentation is furnished with Restricted Rights.



CAUTION

Non-hot plug

Please cut off the power before connect or examine and repair the electrical equipment.

**METTLER TOLEDO RESERVES THE RIGHT TO MAKE REFINEMENTS
OR CHANGES WITHOUT NOTICE.**

Content

Chapter 1 Introduction	1
IND320 FEATURES	1
Model Identification	2
Physical Dimensions	3
Options	4
Analog Output Option Board	4
Chapter 2 Installation	5
Power Requirements	5
Ferrites	5
Load Cell Connections	6
Discrete I/O Connections	7
Serial Connections	9
DIP switch settings (4-bit black DIP switch K1)	9
Chapter 3 Operation	10
Key Operation	10
Display	14
Beeper	16
Language Set	16
Calibration	16
Zero and Tare	19
Print	20
Menu Tree	22
Parameter Configuration Table	30
Chapter 4 Batch Operation	33
Single Material Batch Mode	33
I/O Definition	33
Parameters Configuration	34
Target Weight Setting	34
Auto Feed	35

1~4 Materiels Batch Mode	35
I/O Definitions	35
Parameters Configuration	37
Target Weight Setting	37
Auto or Manual	38
Setpoint Mode	50
I/O Definition	50
Parameters Setting	50
Target Weight Setting	51
Chapter 5 Appendix.....	52
Communications	52
MODBUS RTU	52
Host Command Mode.....	56
Host Continue Mode	57
MT Command Mode.....	58
MT Continue Mode	58
MT Cont-T600	59
Print Format	60
Print Allot.....	60
Print Total	60
Print Recipe.....	61