



CÔNG TY TNHH KỸ THUẬT VÀ THƯƠNG MẠI HOÀNG THANH  
HOANG THANH TECHNICAL & TRADING COMPANY LIMITED

Địa chỉ: Số 3 ngách 138/58/29 Tân Triều – Thanh Trì – Hà Nội

Điện Thoại : 0987 059 224 Fax: (04) 3552 8854

Website : hota.vn - bancandientu.vn Email: hoang.hota@gmail.com

## and IND331XX Terminals

### METTLER TOLEDO Service



#### Essential Services for Dependable Performance of Your IND131/IND331 Terminal

Congratulations on choosing the quality and precision of METTLER TOLEDO. Proper use of your new equipment according to this Manual and regular calibration and maintenance by our factory-trained service team ensures dependable and accurate operation, protecting your investment. Contact us about a service agreement tailored to your needs and budget. Further information is available at [www.mt.com/service](http://www.mt.com/service).

There are several important ways to ensure you maximize the performance of your investment:

- 1. Register your product:** We invite you to register your product at [www.mt.com/productregistration](http://www.mt.com/productregistration) so we can contact you about enhancements, updates and important notifications concerning your product.
- 2. Contact METTLER TOLEDO for service:** The value of a measurement is proportional to its accuracy – an out of specification scale can diminish quality, reduce profits and increase liability. Timely service from METTLER TOLEDO will ensure accuracy and optimize uptime and equipment life.
  - a. Installation, Configuration, Integration and Training:** Our service representatives are factory-trained, weighing equipment experts. We make certain that your weighing equipment is ready for production in a cost effective and timely fashion and that personnel are trained for success.
  - b. Initial Calibration Documentation:** The installation environment and application requirements are unique for every industrial scale so performance must be tested and certified. Our calibration services and certificates document accuracy to ensure production quality and provide a quality system record of performance.
  - c. Periodic Calibration Maintenance:** A Calibration Service Agreement provides on-going confidence in your weighing process and documentation of compliance with requirements. We offer a variety of service plans that are scheduled to meet your needs and designed to fit your budget.

# Contents

<b>Chapter 1</b>	<b>Introduction .....</b>	<b>1-1</b>
	Overview .....	1-1
	Standard Features .....	1-1
	Terminal Versions.....	1-2
	Specifications .....	1-3
	Use in Hazardous Areas .....	1-6
	Safe Disposal Requirement .....	1-7
	Inspection and Contents Checklist .....	1-7
	Model Identification .....	1-8
	Physical Dimensions .....	1-9
	Main PCB.....	1-11
	Scale Base .....	1-12
	Options .....	1-12
	COM2 Serial Port .....	1-12
	Discrete I/O .....	1-13
	PLC Interfaces .....	1-13
	SD Memory Option.....	1-14
	Display and Keyboard .....	1-15
	Display Layout .....	1-15
	Front Panel Keys.....	1-16
<b>Chapter 2</b>	<b>Operation .....</b>	<b>2-1</b>
	Overview .....	2-1
	Basic Functionality .....	2-1
	Zero .....	2-1
	Tare .....	2-2
	Clearing Tare.....	2-3
	Print.....	2-4
	Information Recall .....	2-4
	Target.....	2-4
	Comparators .....	2-6
	Calibration .....	2-7
	CalFREE™ .....	2-8
	Security.....	2-8
	Display Operation.....	2-8
	Keypad Operation.....	2-9
	Operator Menu .....	2-10
	Language Selection – F Codes .....	2-10
	Accessing the Operator Menu.....	2-10
	Navigating the Operator Menu.....	2-11

Numerical Data Entry.....	2-12
Target Menu.....	2-14
Comparator Menu.....	2-15
Information Recall Menu.....	2-16
Calibration Menu.....	2-16
Setup Access.....	2-20
<b>Chapter 3 Configuration.....</b>	<b>3-1</b>
Setup Menu Tree.....	3-1
Use of Keys Within Menus.....	3-1
Entering Setup Mode.....	3-3
Security.....	3-3
Metrology Switch.....	3-4
Exiting Setup.....	3-4
Overview of Setup.....	3-4
Configuration Options.....	3-5
Scale – F1.....	3-6
Application – F2.....	3-15
Terminal – F3.....	3-19
Communication – F4.....	3-21
Maintenance – F5.....	3-31
Restoring Factory Default Settings.....	3-35
<b>Chapter 4 Service and Maintenance.....</b>	<b>4-1</b>
Cleaning and Maintenance.....	4-1
Service.....	4-2
Troubleshooting.....	4-2
Diagnostic LEDs.....	4-2
Problems.....	4-3
Error Codes and Error Messages.....	4-3
Internal Diagnostics.....	4-4
System Backup and Restore.....	4-7
Backup.....	4-8
Restore.....	4-9
SD Memory Files and InSite.....	4-10
Importing the File.....	4-10
Saving as a *.txt File.....	4-10
Saving as a *.BCF File.....	4-11
Master Reset.....	4-11
Upgrading Firmware.....	4-12
Using InSite.....	4-13
Using the SD Memory Card.....	4-14

Appendix A	Default Settings .....	A-1
	Setup Defaults.....	A-1
Appendix B	Parameter Values .....	B-1
Appendix C	Communications.....	C-1
	Serial Interface Parameters .....	C-1
	Demand Output Mode.....	C-2
	Output Templates .....	C-2
	Continuous Output Mode.....	C-3
	Standard Continuous Output.....	C-3
	Continuous – Extended Output.....	C-5
	CTPZ .....	C-8
	Standard Interface Command Set (SICS) Protocol .....	C-8
	Version Number of the MT-SICS.....	C-8
	Command Formats .....	C-9
	Response Formats .....	C-9
	Tips for the Programmer .....	C-11
	Commands and Responses MT-SICS Level 0 .....	C-11
	Commands and Responses MT-SICS Level 1 .....	C-16
	Variable Access.....	C-19
	Connection.....	C-19
	Commands .....	C-19
	Variable List .....	C-21
Appendix D	GEO Codes.....	D-1
	Original Site Calibration.....	D-1
	New Site GEO Code Adjustment.....	D-1